
# Mini Fridge Table 65

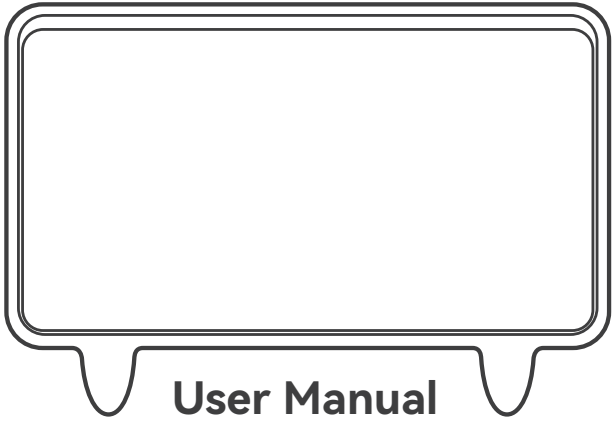

## User Manual

**WARNING** READ UNPACKING INSTRUCTIONS CAREFULLY. YOU MUST LEAVE THE FRIDGE SITTING TOPSIDE UP FOR A MINIMUM OF 2 HOURS PRIOR TO PLUGGING IN AND TURNING IT ON. DO NOT PLACE THE FRIDGE UPSIDE DOWN, ON EITHER END OR ANY SIDES.

**WARNING** THOROUGHLY READ ALL INSTRUCTIONS AND WARNINGS PRIOR TO FIRST USE.FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE UNIT, PERSONAL INJURY AND/OR PROPERTY DAMAGE.

If the power cable is damaged, it must be replaced bythe manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not intended for use by persons(in-cluding children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge,unless they have been given supervision orinstruction concerning use of the appliance by a person responsible for their safety.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This device complies with part 15 of the FCC Rules.Operation is subject to the following two conditions:
(1)This device may not cause harmful interference,
(2)this device must accept any interference received including interference that may cause unde siredoperation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could avoid the user's warranty to operate the equipment.

To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

WARNING: Keep ventilation openings, in the appliance enclo-sure or in the built-in structure clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Please accord to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance,please take off the doors to prevent children trapped.

With the disposal of the appliance, it must be done by the manufacturer or its service agent or a similarly qualified person in order to avoid fire and other hazard.
**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC RulesThese limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.the user is encouraged to try to correct the interfer-ence by one or more of the following measures:
-Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

## TABLE OF CONTENTS

1.Notice For Safety
2.table of contents & specifications
3.preparation before using
4.Safety Precautions & Warnings
5.Features
6.Parts List
7.Control Panel&Fridge Operation
8.Speaker Operation
9.Charging Functions
10.Daily Maintenance
11.Transporting the Fridge
12.Trouble Shooting

## SPECIFICATIONS


| | | | |
|---|---|---|---|
| Consumption | 0.32KWh/24h | Temp.Controlling | Mechanical temperature control |
| Noise | 36db | Cooling Type | Compressor |
| Voltage | 110V/60Hz | Refrigerant/Wt | R600a/17g |
| Net Weight | 31kg | Volume | 65L |
| Product dimensions (mm) | 667*705*460 | Refrigerator Temp | 1℃ – 12℃ |
| Packaging dimensions (mm) | 760*775*486 | Operational control | Knob contro |

# PREPARATION FOR USE

1.Remove all packaging materials.

**WARNING**

Remove from foam base. Do not use while on foam base. Doing so may result in personal injury and/or property damage.

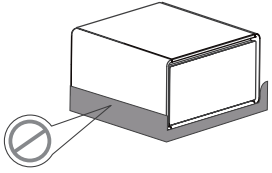


2.Peel off transparent film from surface of the table.


3.Ensure all accessories are included.



Coffee Table x 1

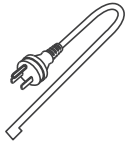

Power Cable x 1



Manual x 1 Partitions x 2 Trays x 1

- The plug pattern is for example only,the specific plug please refer to local standard

4. Place table where it will be hooked up.

**WARNING**

When placing the table, there should be a gap of at least 10 cm around the table.

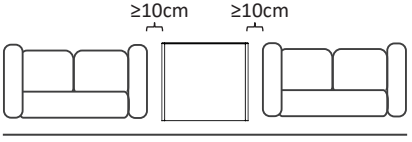



Table should be on flat, solid surface.


5.Clean the unit before using(Refer to Maintenance Instructions).

6.Do not connect the power cord to power source.Let unit sit for 2 hours.

7.After 2 hours,it is ready to be plugged in and powered on.

**WARNING**

There is overload protecti on the bottom of the unit.If the total power consump- tion exceeds 960W,the powe supply will cut off automatcally.

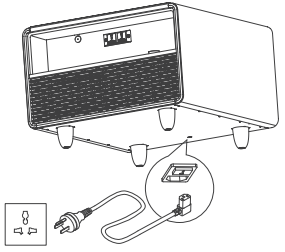


## POWER SUPPLY WARNING

- Before initially powering on the unit, please install the cable cover to prevent any damage of the cable.
- The power cord should be kept in firm contact with the power source. Failure to do so could result in property damage, personal injury and/or fire.
- To avoid damage to the cable, please do not step on the cable.
- Do not roll over the power cord when moving theFridge.
- When unplugging the Fridge, do not pull on the cable. Firmly grasp the plug to remove from power source.
- Before cleaning, repairing or replacing any parts unplug the Fridge to avoid electric shock.
- If the power cable or plug has any damage, do not use.
- Fridge should be powered by AC 110V. If the voltage fluctuation is out of range, it may cause unit failure, property damage and/or personal injury.

## GROUNDING WARNING

Independent power source should be used and be grounded. Fridge power cable is equipped with grounded plug and socket.Never remove or cut off the third pin.

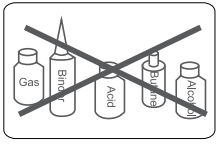


## WARNING

No repairs or modifications shall be made to the fridge.Failure to adhere to this warning may result in property damage, personal injury and/or death.




NOTE: New refrigerant type R600a must be repaired by a trained professional. Fire may occur during repair, if not handled properly. Damaged units should be recycled by a professional company or as detailed by the State of residence.

## STORAGE WARNINGS

- Fridge should not be used to store blood or other biological products.
- Fridge should not be used to store any products that are inflammable, explosive or dangerous, as well as any chemicals.

## ENVIRONMENT

Fridge should be placed far away from any heat source and out of direct sunlight.

Fridge should be placed in a well-ventilated area,with at least 16-inches around all sides.

Do not place the Fridge in areas that are damp or where the unit may encounter water.

Do not place power sockets, regulated power supplies or small appliances on the Fridge.

Do not put unstable objects on the Fridge to avoid damage to top.

Use caution when placing objects with liquid on table Spilling liquid can result in property damage, personal injury and/or electric shock.

Do not store gas or any other flammable materials in or near the Fridge to avoid possible fire hazard.

If there is any gas or other flammable material leak around the unit. Close the gas valve and open all doors,and windows immediately.DO NOT PULL OR TOUCH THE FRIDGE UNTIL AREA IS CLEAR



### WARNING

Do not use Fridge if it has been subjected to any shock or damage. Do NOT attempt to repair the Fridge. Repairing or modifying your Table may result in property damage,fire, personal injury and/or death

## REFRIGERATED DRAWERS

The Fridge is designed with refrigerated drawer drawers come with partitions and trays to organize all your favorite beverages and snacks.

## NOTE:

- Only store fresh food in the Fridge.
- Do not store foods that require colder environments.
- Do not put hot food into the Fridge, as it will increase the temperature inside the unit, affecting items.
- Do not open the drawers frequently or leave them open as it will also cause the temperature to rise.
- Make sure items are securely sealed to avoid excess moisture. This will help keep your Fridge clean and free of odors.

## HIGH EFFICIENCY COMPRESSOR

The Fridge is equipped with a high efficiency compressor to keep your unit working at optimum performance.

## PARTITION STORAGE

In order to more effectively utilize the storage space,there are two partitions and one tray in each drawer allowing for more flexible use.

## REMOVABLE DOOR SEAL


The door seal ensures long lasting use of the refrigerated drawers.It is removable so it can be easily cleaned to help reduce energy consumption.


## SHELF STORAGE

Designed with shelf storage to place small items to help personalize your space.

## COMPONENT NAME

All the illustrations in this manual are schematic diagrams. Some features and devices may not be exactly the same as those in your product. For the specific structure and configuration, please refer to the product itself.

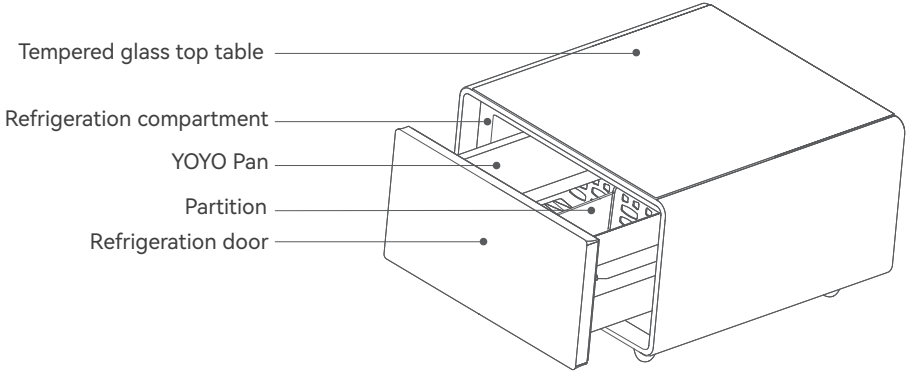

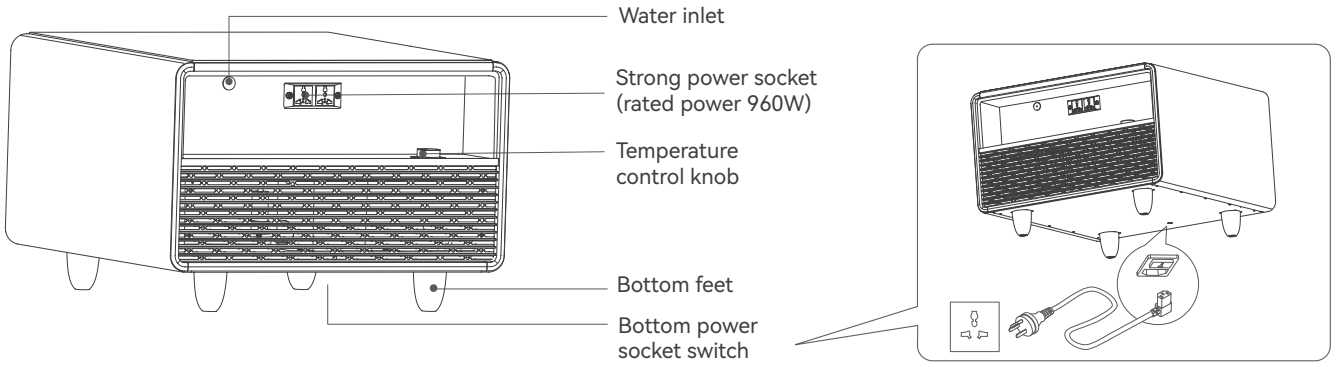
6. PARTS LIST

# REFRIGERATOR OPERATING INSTRUCTIONS


**TEMPERATURE REGULATION**

The knob on the back of the product is used to adjust the temperature of the refrigerator compartment. The cooling settings are divided into 1, 2, 3, 4, and 5 levels. The higher the level, the stronger the cooling effect.
Turn the knob clockwise and the air conditioning will switch between the 1st to 5th settings in sequence.

**TEMPERATURE ADJUSTMENT SUGGESTIONS**

In spring and summer, it is recommended to set the gear to 3 to 5;

In autumn and winter, it is recommended to set the gear to 1 to 3.

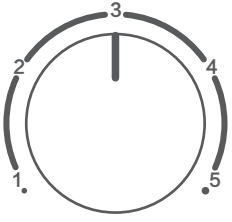



# POWER SUPPLY

**(THE POWER OF THE EXTERNAL ELECTRICAL APPLIANCE CANNOT EXCEED 1300W! DO NOT USE IT WITH AN EXTERNAL POWER STRIP.)**

The product is equipped with a 110V power platform interface. The plug current is 10A and the rated power is 960W. It can simultaneously supply power for two-plug and three-plug electrical appliances, such as tea kettles, coffee machines, smart speakers, projectors, laptops, etc. When powered on, simply connect the power cord to the power socket and it can start the household electrical equipment directly.

**NOTE:**

- Do not let water drop into the power socket.
- Do not use a damp cloth for cleaning and wiping the surface.
- Do not use electrical appliances with power exceeding the rated capacity of 960W.
  Do not use an external power strip.
- If you notice abnormal heating of the power socket, please immediately cut off the power supply and stop the operation of the connected electrical appliances.
  If the switch is closed due to overload protection, you should first check for any appliances with excessive power consumption, and then reopen the switch to use it.

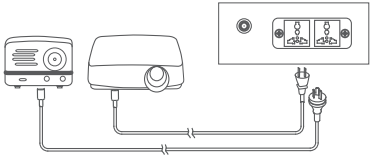


**REPLACE THE FUSE**

When the load power of the socket exceeds 960W, it will cause the fuse to melt. At this time, a new fuse should be replaced.
This product is equipped with a spare fuse (visible upon opening the fuse compartment cover). The replacement steps are as follows:



1. Use tools to open the fuse compartment cover;



2. Remove the blown fuse and install the spare fuse wire in its original position on the compartment cover.




3. Reinstall the compartment cover to its original position and confirm that it is securely installed.

## WATER INLET


To help customer to get the ice water or hot tea in the living room easily, we have designed a water supply pipe, which runs through to the refrigerator drawer (where the water storage tank is placed), at the left inner side of the cable box at the back of the product. As long as customers have an automatic water supply device or an automatic boiling water heater, then connect it to a power socket, customer can meet their daily needs for drinking ice water or hot tea on the coffee table.


**Note:** water pipe (with a diameter of no more than 8mm), the automatic water filler, the automatic water heating stove (with a power of no more than 960W), and the water storage tank (with dimensions of no more than 386mm in length, 160mm in width and 186mm in height) need to be purchased separately.

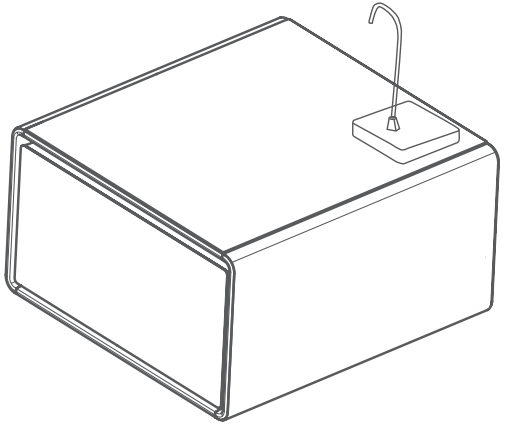

## WATER INLET

The factory setting comes with a plug at the inlet. Remove the plug and you can connect the water pipe for use.

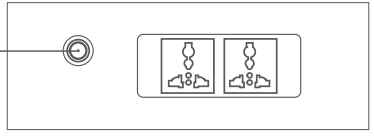

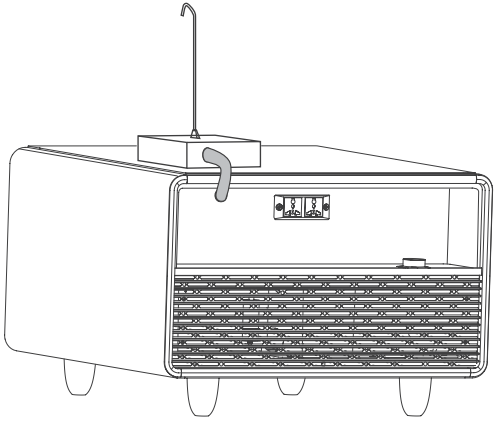

## CLEANING THE FRIDGE

Clean drawers regularly. Do not leave old food stored in drawers.


1. Unplug the Fridge prior to cleaning.
2. Do not disassemble the unit with force, as it may cause damage.
3. clean the unit with a soft,damp cloth.Dry unit with soft cloth.Do not use too much liquid as it may cause deformation,and or short cricuit the unit.No free-flowing liquid should be used.
4. Clean drawers with soft, damp cloth and mild detergent. Dry with soft cloth.
5. Inspect the unit after cleaning.Do not use if any damage is found.
6. Make sure unit is completely dry before plugging back in.

**NOTE:** Be sure to clean the door seal thoroughly to ensure a long-lasting.
good seal and preserve power consumption.

- The Fridge is heavy. Protect floor when cleaning the unit.
- When moving the Fridge, do not shake.
- Do not use hot water to clean glass top or any other part of the Fridge, including the drawers,trays and partitions.

## REMOVING THE DRAWERS FOR CLEANING


1. Before removing the drawers take the trays and partitions out.
2. Pull drawer as far as it will go, then lift and pull gently.
3. Clean drawers, trays and partitions can be washed.
4. Clean door seals.
5. Dry all parts before placing the drawers back into the unit

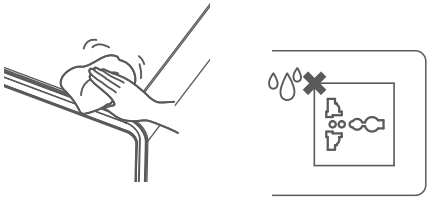

## ⚠ WARNING

Do not spray water onto or into the unit.
Dry completely before connecting to power source.
Do not use the following substances:

Acidic or alkaline solutionor powders
Benzene, sodium bicarbonate, alcohol, carious acids or petroleum
Abrasive cleaners
Abrasive sponges or hard brushes
Hot water

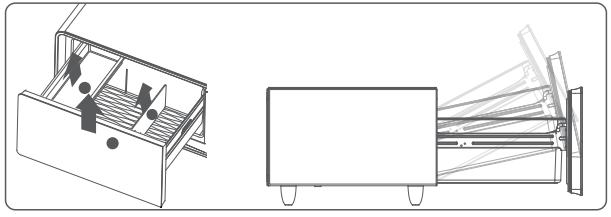


# TRANSPORTING THE FRIDGE

Unplug the Fridge.

Secure the trays and partitions.

Do not tilt or stand the Fridge up. The maximum incline should be less than 45 degrees, Inclining more can cause damage to the refrigeration system.

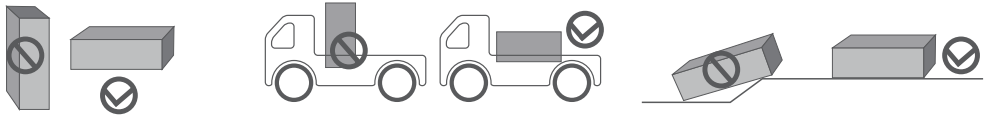

Refrigerated drawers will stay cool for 1-2 hours without power. However, once power has been shut off, do not open the drawers again to preserve the inside temperature.

⚠ Any power failure can cause temperatures to rise and shorten lifespan of food and quality of food. If the fridge has been without power for an extended period of time, unplug the unit and thoroughly clean.

⚠ If leaving your home for an extended vacation,please power off and remove any perishables being stored in the unit.

| Fault | Causes | Solutions |
|---|---|---|
| Power light is on, compressor is working but making "humming" sound. | Power Voltage is lower than 90V. | Stop powering on the refrigerator and wait the voltage to get back to normal. |
| compressor starts but stops after about one minute,and then starts and stops ongoing. | Power voltage is higher than120V | |
| compressor runs for a long time, but evaporator surface is frost free. | Leak | Professional inspection is required. |
| | Blockage | Professional inspection is required. |
| There is frost on the surface but the compressor is keep working. | Too much frost on evaporator. | Defrost. |
| | Opening the drawers for a long time. | Do not open drawers frequently. |
| | Drawers are filled with too many items. | Remove some of the items inside. |
| | Bad heat dissipation of condenser | Move to a ventilated area. |
| | Thermostat is failing or sensor is missing. | Professional inspection is required. |
| The refrigerator doesn't work and refrigerated. | Fuse is blown and the power light is off. | Replace fuse. |
| | Input controlling circuit has fault and the power light is off. | Professional inspection is required. |
| Excessive noise | Machine places uneven. | Adjust the feet of the refrigerator. |
| | Inner fastener is loose. | Secure the fastener. |
| | Collision between pipes. | Separate the pipes. |
| It can refrigerate but when touch the surface, there is a slightly hemp and the electroprobe test with a light bright. | Induced electricity is leaking. | Check the earthing conductor. |