
LIVTAB Extension Pegboard Kit Installation


A Before Installation

- Make sure the desk has been fully assembled.
- Ensure all required hardware is available.
- Do not fully tighten screws until all parts are correctly aligned.

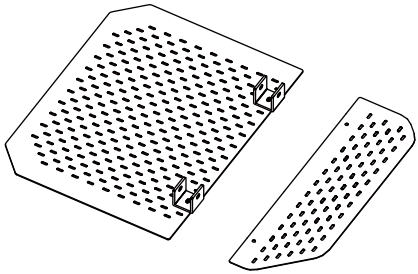

Installation requires two people.




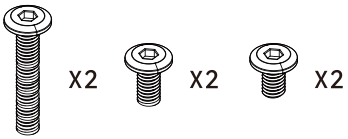

Hardware Included

- 2 × M6 × 45 Hex Socket Screws
- 2 × M6 × 12 Hex Socket Screws
- 2 × M6 × 8 Hex Socket Screws


B

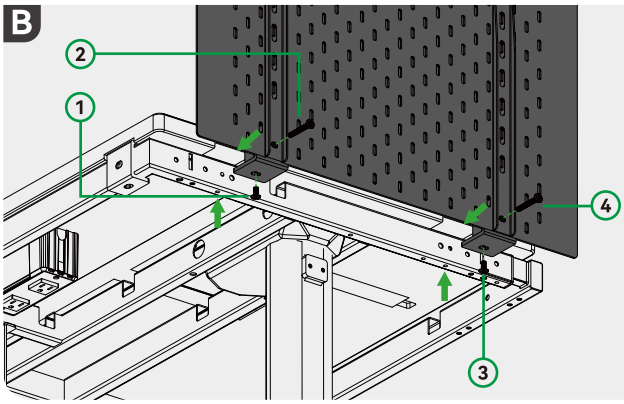

Step 1

Position the Extension Pegboard Kit onto the Extension Desk frame as shown.
Align the mounting holes with the frame.
Secure the Pegboard using 2 × M6 × 45 and 2 × M6 × 12 Hex Socket Screws.

C

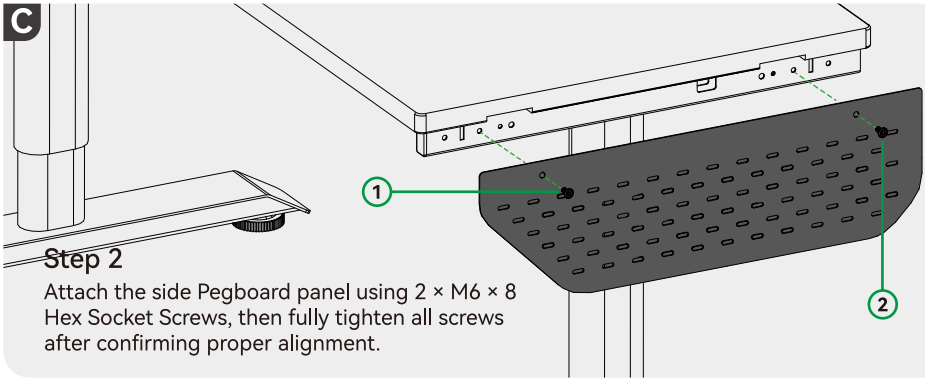

Step 2

Attach the side Pegboard panel using 2 × M6 × 8 Hex Socket Screws, then fully tighten all screws after confirming proper alignment.

Final Check

- All screws are securely tightened.
- All cables are properly connected (if applicable).
- Ensure the accessory is firmly installed before use.

⚠ CAUTION

Ensure all screws are securely tightened before use.

- After unpacking the product, confirm that all parts are included. If anything is missing, please contact customer support at **support@livtab.com.**

- Scan the QR code to view the installation video: **livtab.com/product-guide.**