
Main Pegboard Installation

A Before Installation

- Make sure the desk has been fully assembled.
- Ensure all required hardware is available.
- Do not fully tighten screws until all parts are correctly aligned.

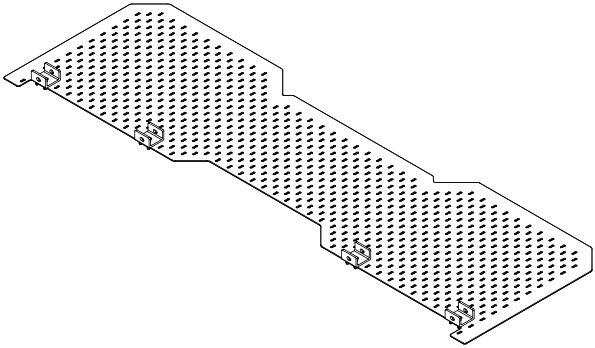



Installation requires two people.



X8


Hardware Included

- 8 × M6 × 12 Hex Socket Screws

B

Step 1

Position the Main Pegboard on the rear frame.
Align all mounting brackets with the mounting holes.
Secure all mounting points (1–8) using the supplied screws.
After all mounting points are aligned, fully tighten all screws.

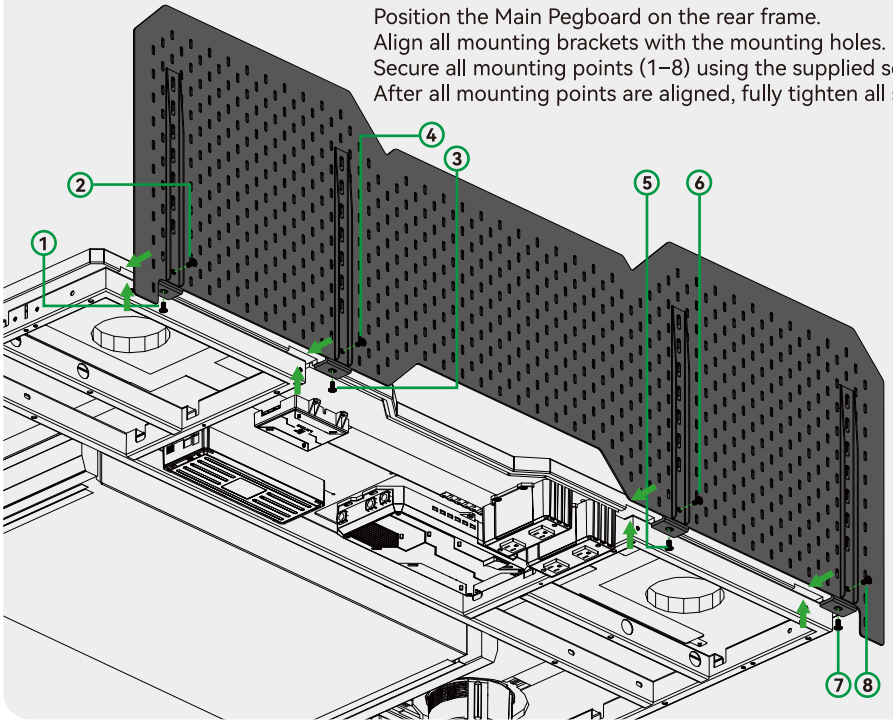

Final Check

- All screws are securely tightened.
- All cables are properly connected (if applicable).
- Ensure the accessory is firmly installed before use.

⚠ CAUTION

Ensure all screws are securely tightened before use.

- After unpacking the product, confirm that all parts are included. If anything is missing, please contact customer support at **support@livtab.com.**

- Scan the QR code to view the installation video: **livtab.com/product-guide.**