
A

Before Installation

- Make sure the desk has been fully assembled.
- Ensure all required hardware is available.
- Do not fully tighten screws until all parts are correctly aligned.

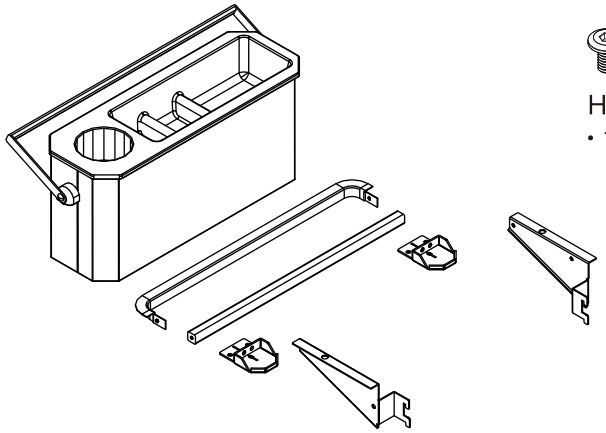


X12

Hardware Included

- 12 × M6 × 8 Hex Socket Screws

B

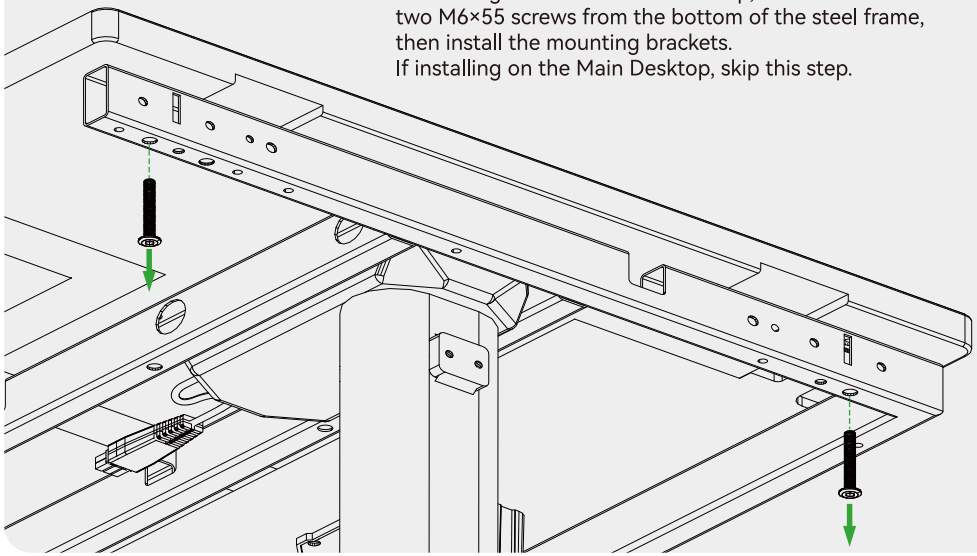


Step 1

If installing on an Extension Desktop, first remove the two M6×55 screws from the bottom of the steel frame, then install the mounting brackets.
If installing on the Main Desktop, skip this step.

LIVTAB Tool Box Installation


C

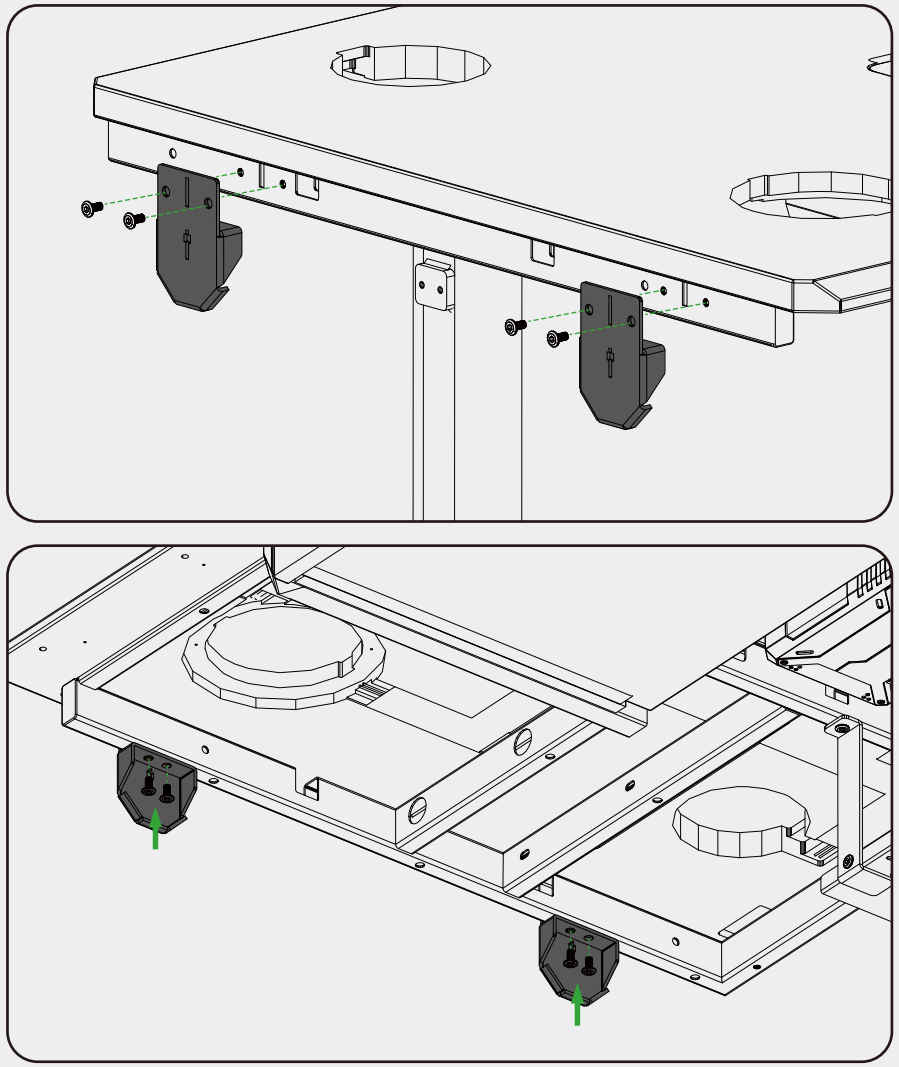

Step 2

Install the 8 mounting screws as shown.


D

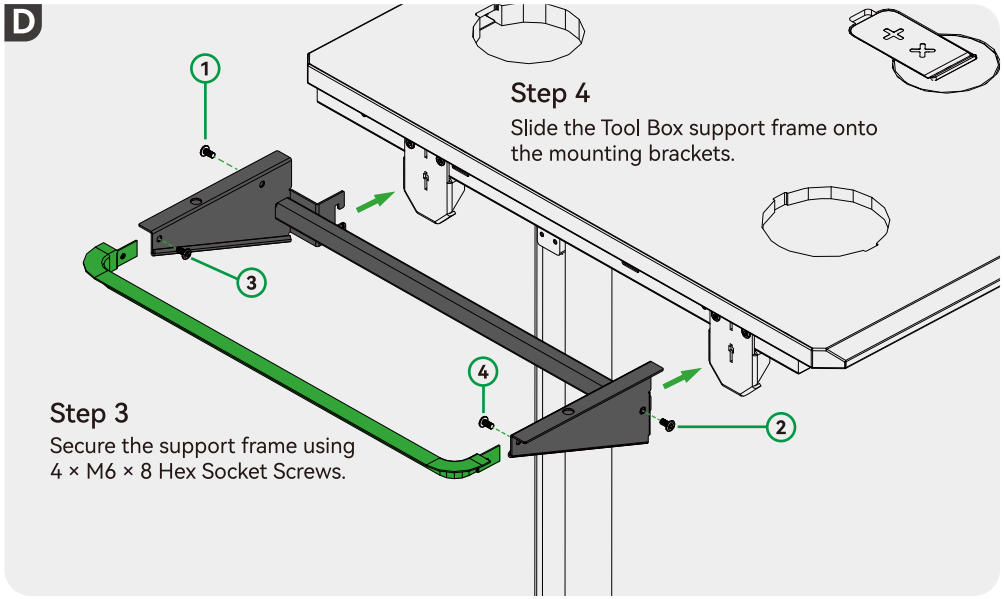

Step 4
Slide the Tool Box support frame onto the mounting brackets.

Step 3
Secure the support frame using 4 × M6 × 8 Hex Socket Screws.

E

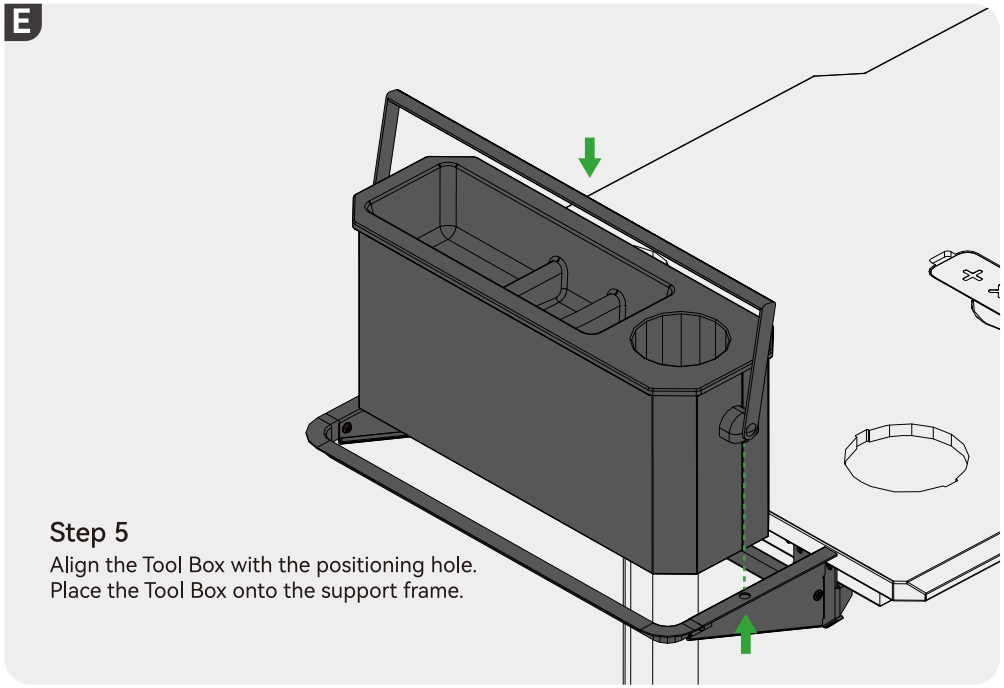

Step 5
Align the Tool Box with the positioning hole. Place the Tool Box onto the support frame.

LIVTAB Tool Box Installation

Final Check

- All screws are securely tightened.
- All cables are properly connected (if applicable).
- Ensure the accessory is firmly installed before use.

⚠ CAUTION

Ensure all screws are securely tightened before use.

- After unpacking the product, confirm that all parts are included. If anything is missing, please contact customer support at **support@livtab.com.**
- Scan the QR code to view the installation video: **livtab.com/product-guide.**